




LUNA PANEL INSTALLATION STEPS (After final painting or wallpaper stage)

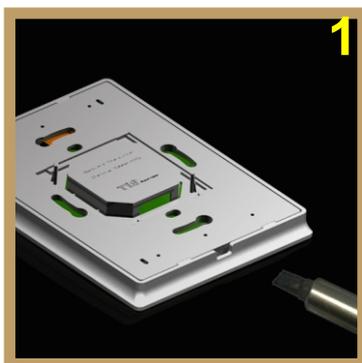


1 Use big flat head screwdriver then insert it in the Panel Cover down opening hole.

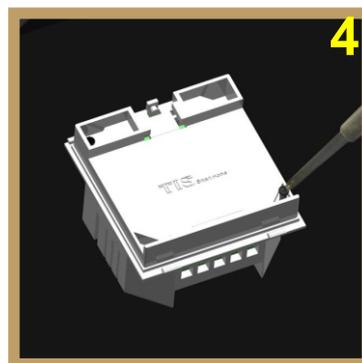

4 Open the 2 screws on the Panel Addition cover.

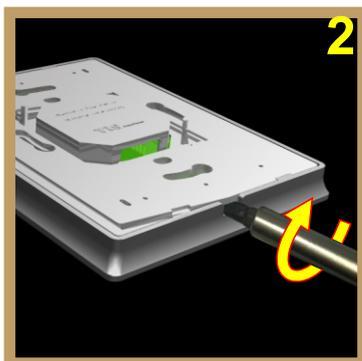


2 Rotate the screwdriver by 90 degrees.

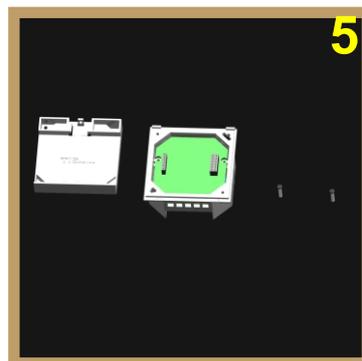


5 Don't throw these screws or the cover as you will need it later




3 Separate the Cover, Main Panel and Wall base from each other

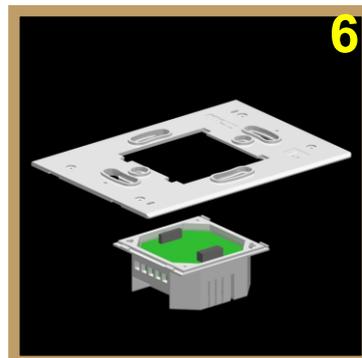


6 Take the wall base and Panel Addition in this correct position for connection

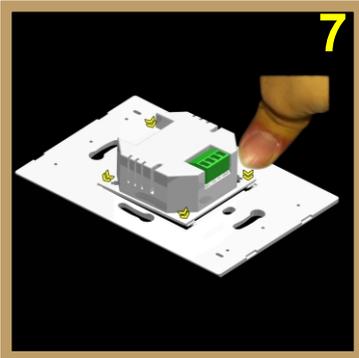


7 Assemble the upper pins than push by your fingers the down pins to assemble it fully

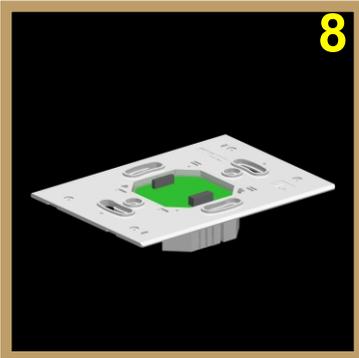

8 This should look like that after the correct assembly

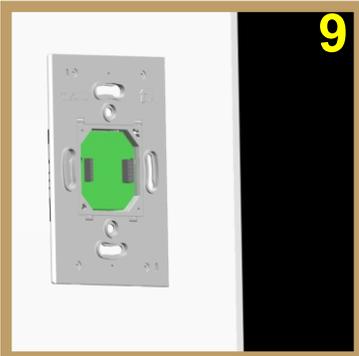


9 Connect the wires to the panel addition then Install this assembled part in the wall

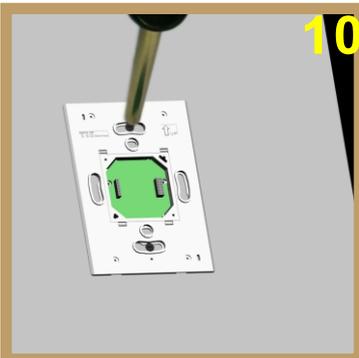


10 Tight the screws to the back box screw holes (can be installed in US back box, UK back box and Europe back box).



11 Pull by your fingers this Protective Plastic Cover vertically, remove it and throw it.

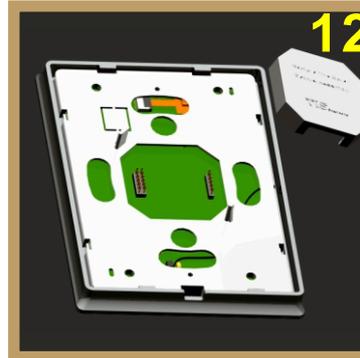


12 This should look like after you remove the Protective Plastic Cover.

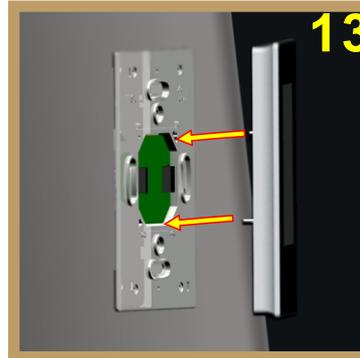


13 Connect the main Luna panel vertically to the other installed part in the wall




14 install the upper part make sure the buckles totally inside than push it from down side to be fixed on wall

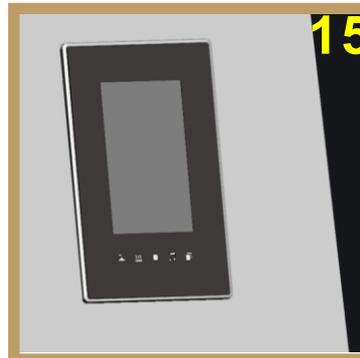


15 Assembly done.

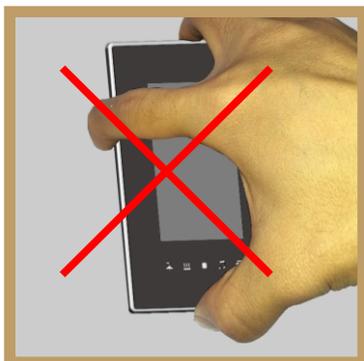


Don't remove the cover by your hands

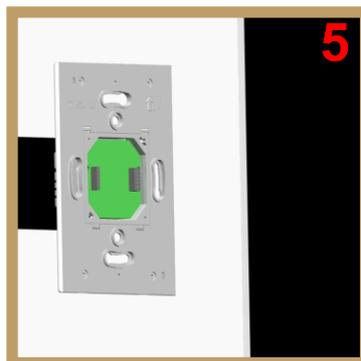


Take out the wall base

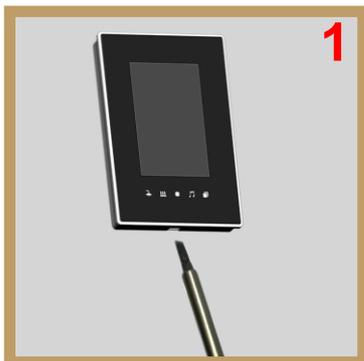


Use big flat head screwdriver then insert it in the Panel Cover down opening hole.

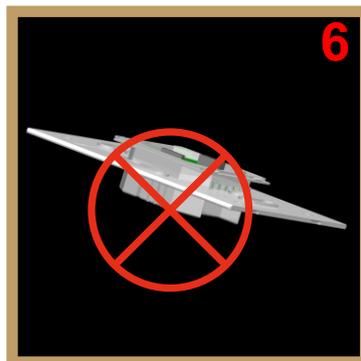


don't push the panel addition in wrong way

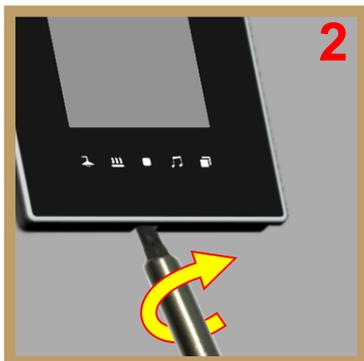


Rotate the screwdriver by 90 degrees.

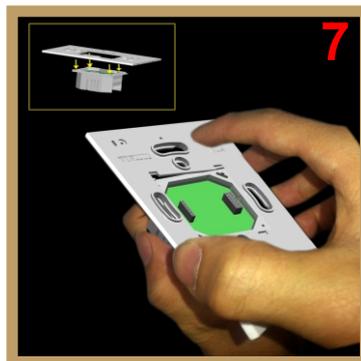


Remove the Panel Addition in this correct way

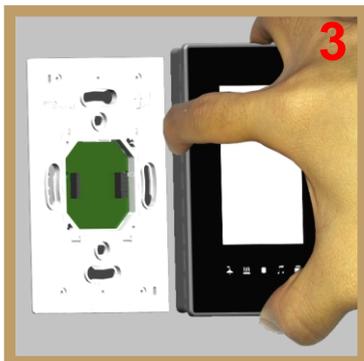

Pull out the panel vertically

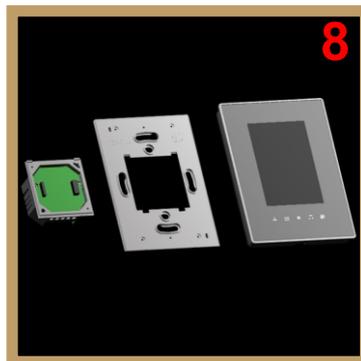

Disassembly done

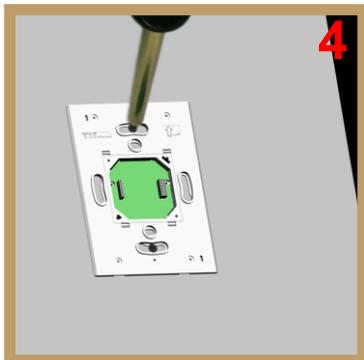


Remove the screws between back box and wall base

LUNA PANEL INSTALLATION STEPS (After semifinal painting)

Use the same assembly steps from 1- 10 above


S11

Connect the Panel Addition cover by the 2 black screws to the Panel Addition.

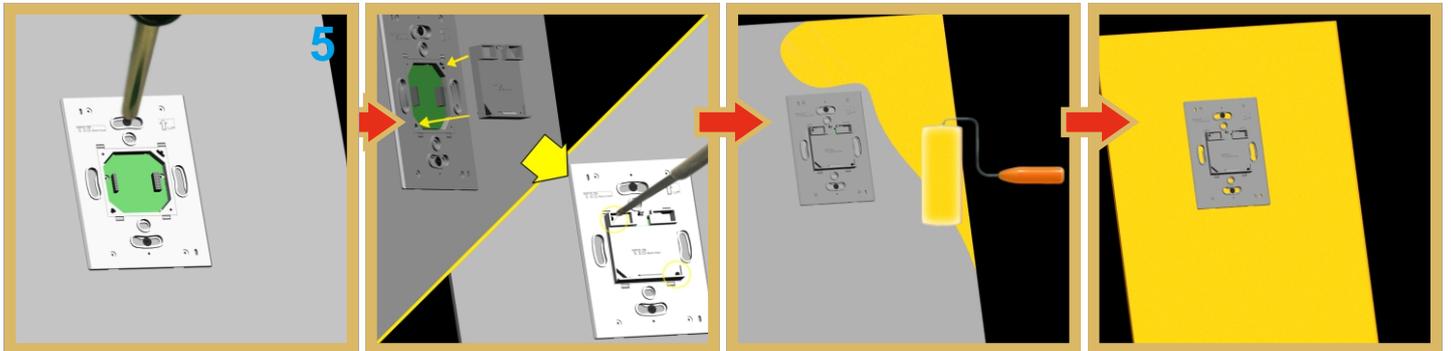

S12

After the final painting or Wallpaper, then remove the Panel Addition Cover

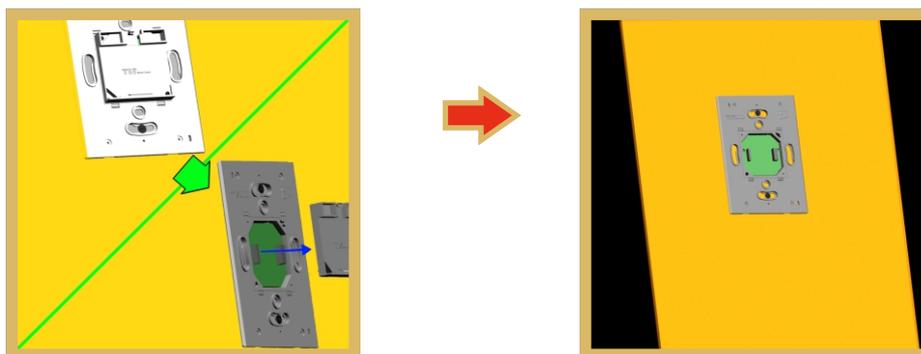

Use the assembly steps from 11- 15 above