

INSTALLATION MANUAL

TIS POWER RELAY

Relay Module with 4 Channels

Model: RLY-4CH-10A

TIS
CONTROL EVERYTHING



PRODUCT INFORMATION

This product features a relay module for smart control over lights ON/OFF, sensors, and motorized components for maximum efficiency and user comfort.

PRODUCT SPECIFICATIONS

	Output Switching Voltage	Number of channels	4
		Nominal voltage	0 – 230 V AC 50/60 Hz
		Max switching voltage	440VAC / 125VDC
	Output switching current	Nominal current per channel	4A
		Maximum total channel load	40A
		Max switching current	16A resistive, 8A florescent
		Max continuous current	10A VAC
	TIS Bus	Number of devices on 1 line	Max. 64
		Bus voltage	12-32 V DC
		Current consumption (Normal)	<20 mA / 24 V DC
		Current consumption (Peak)	<100 mA / 24 V DC
		Protection	Reverse polarity protection
	Operation	Programming button/LED	For assignment of the physical address
		1-4 buttons	Manual ON/OFF and programming
		By TIS bus	TIS protocol messages and commands
		Programming	Manual & via software
	Functions	Lighting control ON/OFF	4 separately controllable channels
		Curtain control	Can set 2 groups of curtains open/close
		Scenes	8 different scenarios
	Dimensions	Width × Length × Height	73mm × 76mm × 90mm
	Housing	Materials	Fireproof ABS
		Casing color	Black
		Button color	Silver
		IP rating	IP 20



BARCODE (UPC-A)





Read Instructions

We recommend that you read this Instruction Manual before installation.



Safety instructions

Electrical equipment should only be installed and fitted by electrically skilled persons.

Failure to observe the instructions may cause damage to the device and other hazards.

These instructions are an integral part of the product and must remain with the end customer.



Programming

This device can be tested and programmed manually. Advanced programming requires TIS Device Search software. Advanced software programming knowledge should be obtained in the advanced training courses.



Simple Installation

DIN Rail mount facilitates installation. Fixing points are provided for installation without the use of DIN rail.



Mounting Location

Install in a dry, well-ventilated location. Controllers may emit some mechanical noise. Take this into account when deciding on a mounting location.



Data Cable

Use screened stranded RS485 data cable with four twisted pairs. Configure devices in a "Daisy Chain."

Do not cut or terminate live data cables.



Electrical Wires

The installer should adequately consider the total current consumption when selecting the wires.

Recommended wire size for load (light channels) and input wires is 2.5 -4 mm.



Warranty

We provide a warranty as required by law. A hologram warranty seal and product serial number are provided on each device. Please send the description of the defect with Product S/N to our dealer network.





INSTALLATION STEPS

1


Turn off the main electrical source before installation.



WARNING! HIGH VOLTAGE


2

Mount the device on a DIN Rail inside an approved enclosure. The device can also be installed without the use of DIN Rail by two mounting screw holes.

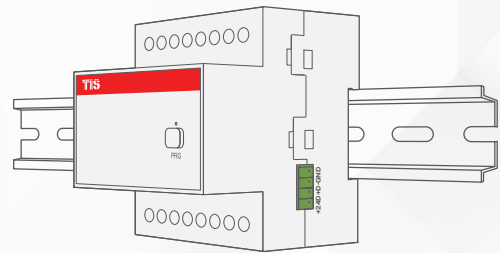

3

Connect a Cat5e TIS network data cable to the TIS-BUS port as per the connection diagram. No need to loop the TIS-bus cable if 2 DIN Rail modules are connected together from the side bus train terminal.

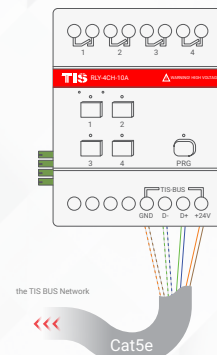

4


Complete the load connection, light, floor heating, and shutter, as per the following steps:



LIGHTS / APPLIANCES / FLOOR-HEATING CONNECTION

Connect the load electrical wires to outputs 1-4. Each channel can control a maximum of 10A loads. The installer should make sure not to overload the channels.

Load neutral wire should be linked to the neutral connection in DB enclosure.

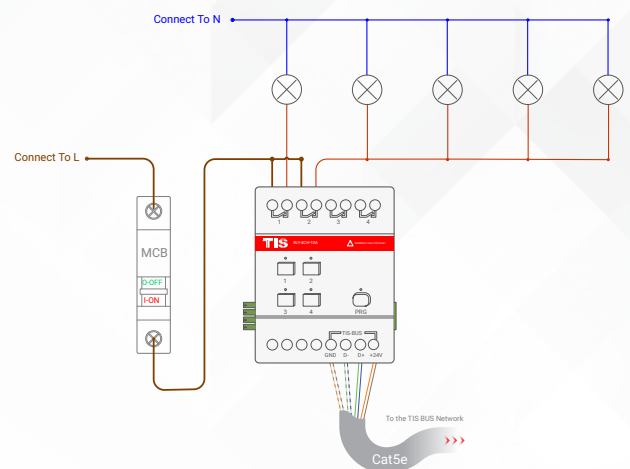



INSTALLATION STEPS




SHUTTER/CURTAIN CONNECTION

Once you combine any 2 channels as shutter/curtain, then connect the shutter-open wire to the first channel and the shutter-close wire to the second channel. The shutter neutral wire should be linked to the neutral connection in DB enclosure.




WARNING: Do not connect curtain motor wires before combining (interlocking) 2 relay channels together as curtain mode to avoid causing damage to motors. Please read about how to manually program shutter/curtain pairing in this manual.

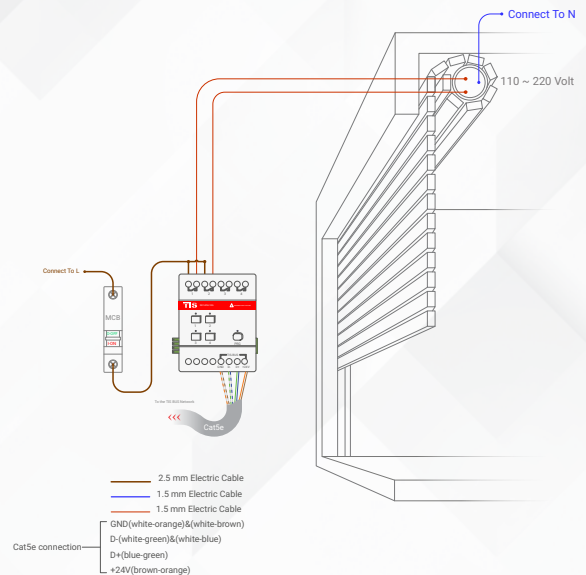


5»

Connect the live (supply) wire to inputs. All inputs must have an appropriate voltage source and an MCB to protect that load circuit.

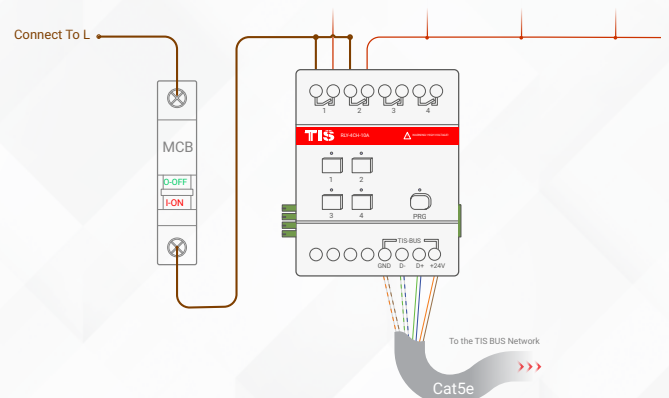

6»

Turn on the power source, and then test the loads by short pressing on the device's local override buttons 1-4.

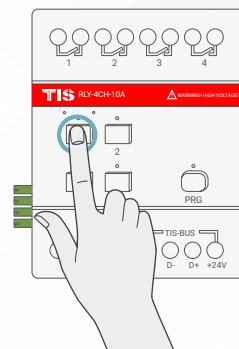

PAIRING (MANUAL PROGRAMMING)




LIGHTS / APPLIANCES PROGRAMMING

All channels by default are used for lights/appliances control.

You can pair device light channels to any wall panels by doing the following:


1 

Long press on any buttons 1-4 for 6 seconds. The LED indicator for the pressed button will start blinking.

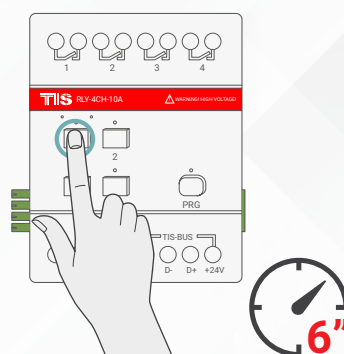


2 

Short press on any wall lights buttons on the Luna, Mars, Terre or other panels.

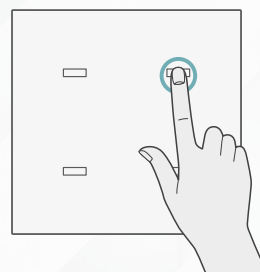

3 


Test the button on the panel by short pressing it for ON/OFF.

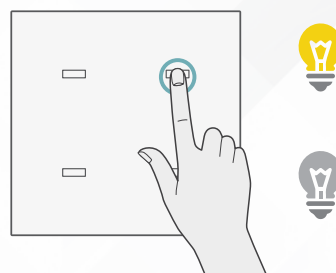


PAIRING (MANUAL PROGRAMMING)

FLOOR HEATING PROGRAMMING


1 Long-press on any buttons 1-4 for 6 seconds. The LED indicator for the pressed button will start blinking.

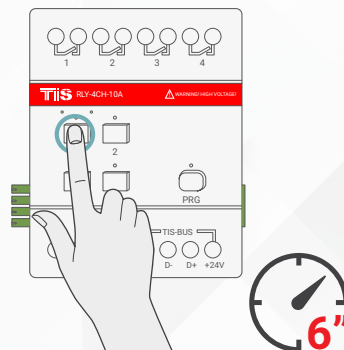

2 Go to floor heater page on any wall panel with the floor heating function, and press ON button to turn on the floor heating.

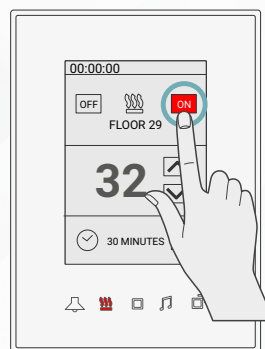

3 Test the floor heating by changing the temperature and turning it OFF/ON.

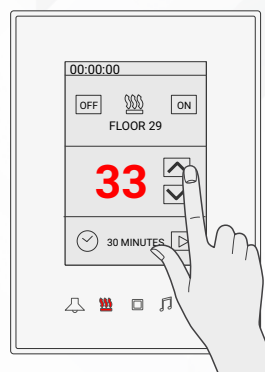



PAIRING (MANUAL PROGRAMMING)




SHUTTER COMBINATION PROGRAMMING

You can change any 2 channels in sequence like CH1 & CH2 or Ch3 & CH4 to be combined (interlocked) together to work as shutter/curtain control.

To combine these 2 channels, complete the following steps manually:


1 »

Press the PRG button for 3 seconds until the LED starts blinking rapidly.

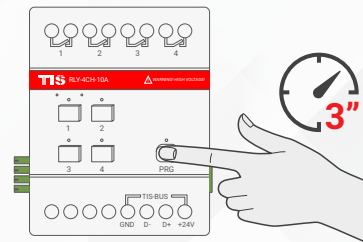


2 »

Short press on the first button and then the second button that you want to combine as curtain control; for example, CH3 and CH4.

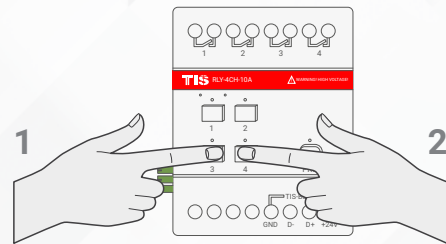


3 »

Wait for few seconds until the PRG LED stops blinking.

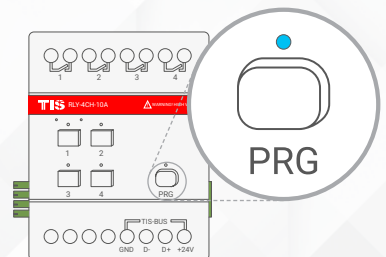


4 »

Test by turning the first button ON and then the second button. Both buttons should not turn ON together. If you see that the first button is turning the other button off, that means that your buttons are successfully combined as shutter/curtain mode.

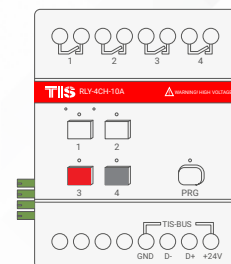


PAIRING (MANUAL PROGRAMMING)


5» To program the curtain to any wall panel, press and hold the CH (shutter-Open) button for 6 seconds. The LED indicator of the pressed button will start blinking,

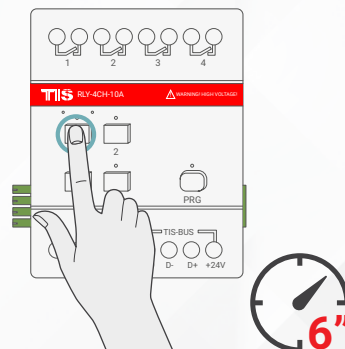

6» Short press on any button on the Luna, Mars, Terre or others wall panels.

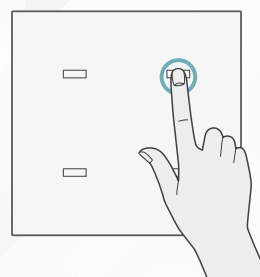

7» Test the button on the panel by short pressing for open/stop. Do the same to program the Close channel with another button.

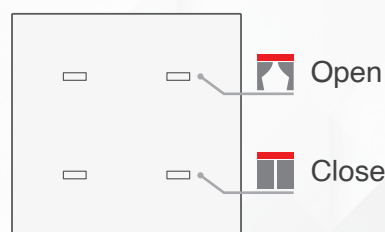

8» To cancel the curtain interlock and return to lighting mode, repeat steps 1-3 above.





TROUBLESHOOTING



PRG Button Blinks Red Color Rapidly

Reason: The module's address conflicts with another device in the TIS network. You need to press and hold the PRG button for 6 seconds so the module can get a new address.



Device PRG LED is not Blinking; Device not Powered

Reason: Device is not powered on; no TIS-BUS 24V supply connected to the device.



Device Button LED ON but lights not ON

Reason 1: Lights' neutral wire not connected

Reason 2: Channel protection delay time is enabled in software.



Wall Panels can't Pair with the Device

Reason1: TIS-BUS connection has a problem; check the wires and make sure there's not a short in the connection.

Reason2: Manual programming function disabled in the device (default is enabled).



Wall Panels can't Control the Device Channels

Reason1: TIS-BUS connection has a problem; check the wires and make sure there's not a short in the connection.

Reason2: Programming address is wrong.



Channel is turning off by itself after few seconds

Reason: It is programmed as shutter/curtain combination, and running time is enabled in the software.